


DETAILED PARTS AND ASSEMBLY PROCEDURE

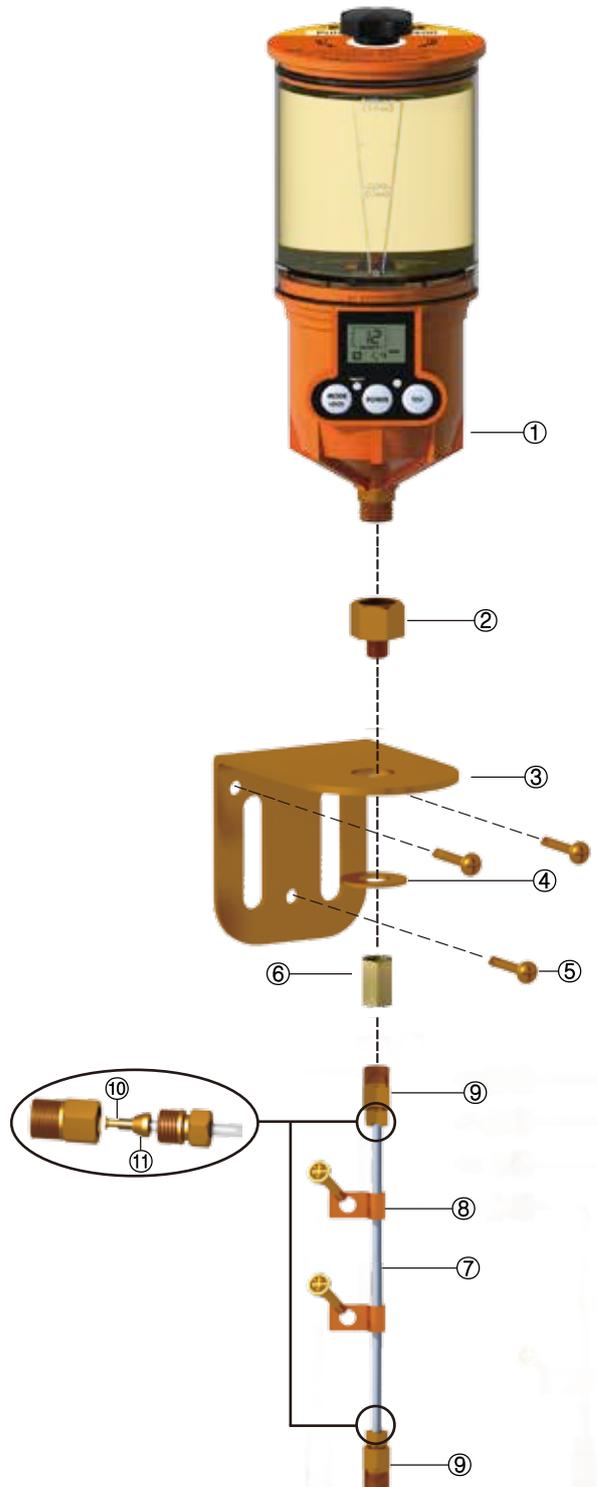

LIST	PART No.	DESCRIPTION	Q'TY
①	OL500	Pulsarlube OL500	N/A
②	A002	PT3/8"F x PT1/8"M Adapter	1
③	B002	Mounting Bracket	1
④	B057	Steel Washer	1
⑤	B051	Self Drilling Screws	5
⑥	A012	PT 1/8"F x PT 1/8"F Adapter	1
⑦	C021-1	Ø4-I.D. 2.5 Nylon Tubing (10ft)	1
⑧	C010	Ø4 x 1R Tube Clamp	2
⑨	C007	Ø4-PT1/8" Fitting Connector	2
⑩	C011	Ø4 x Ø2.5 Insert	2
⑪	C009	Sleeve Ring Ø4	2

Oil brush and bracket assembly is available (sold separately).

ASSEMBLY PROCEDURE

1. Install the mounting bracket (③) at a proper location using screws (⑤) to allow for easy installation and filling of oil.
2. Install the lubricator using the adapter (②), washer (④), and socket (⑥).
3. Remove the oil reservoir lid and fill the cartridge with oil to the 500cc level on the label. Turn the hand knob counter clockwise 1~2 turns before closing the lid to open the vent and relieve vacuum pressure.
4. Press the "TEST" button for 2 seconds to run test mode. Confirm that the unit is dispensing oil properly.
5. Assemble the socket (⑥) and the fitting connector (⑨).
6. Connect each end of the tubing to the fitting connector (⑨). Assemble the insert (⑩) and sleeve ring (⑪) in order, as shown in the circled image on the left. (If an oil brush and bracket assembly is to be used, connect brush to a fitting connector (⑨) at the end of lube using an appropriate socket.)
7. Use the tube clamps (⑧) and screws (⑤) to affix the tubing (⑦) to a wall.

COMMENTS

- Apply PTFE tape around the thread on fittings (②) and (⑨) and on the tip of the lubricator.
- Output volume may vary depending on oil viscosity, length of lube, ambient temperature, etc.

Note : All parts above are Metric thread.